

SenlabD

TOR-LAB-xxNS[©]

FIRMWARE VERSIONS 1.2.X / 1.3.X

User guide

SENSING-LABS

VERSION 02 - REV I / JUNE 2018


Table of contents

| | |
|---|----|
| General overview | 2 |
| Provisioning of the device | 3 |
| On-site installation | 4 |
| DEVICE POSITIONING | 4 |
| DEVICE MOUNTING | 4 |
| WIRING DIAGRAM..... | 5 |
| Activation of the device | 6 |
| Deactivation of the device | 6 |
| Application features | 7 |
| Measure data..... | 7 |
| Event data | 7 |
| Configuration requests | 8 |
| Battery replacement (Indoor version only) | 9 |
| Technical characteristics | 10 |
| ISM Radio bands usage | 10 |
| Electrical safety | 10 |
| Ambient temperature of use | 10 |
| Legals | 11 |

Thank you for your choosing our Senlab product!
We hope you will find the instructions on this user manual clear and easy to follow.

General overview

The Senlab Digital (SenlabD) sensor is a smart LoRaWAN™ radio device with a digital input for 'on/off' or 'close/open' state detection. Therefore, SenlabD can monitor the status of relays, transistors or switches.

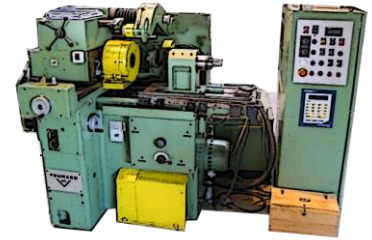

SenlabD can be configure to fit with various detection need
(see Application features for more details):

- **Real-time alert:** a message is sent as soon as the state change
- **Logging state detection:** transmission at least every X hour of all state detection
- **Advanced state configuration:** state duration to validate open or close detection



The input is open when the electronic circuit between the wires *Input1* and *Ground* detects an open circuit.

The minimum time to receive two "event messages in live depends of ISM rules (freq. band and duty cycle) and LoRa SF: from a few second to 3 minutes maximum. In all cases, all state detection will be stored and send.

Any question about your sensor compatibility? Please contact your distributor.

| Part number | Casing type | Protection level | Dimension |
|---------------------|-------------|------------------|----------------------------|
| TOR-LAB-13NS | Outdoor | IP67 | 102x56x35mm cable: 50cm |
| TOR-LAB-21NS | Indoor v1 | IP30 | 85x53x25mm |
| TOR-LAB-41NS | Indoor v2 | IP30 | 91.5x50x25mm |



Outdoor




Indoor v1



Indoor v2

3 steps are required to make your senlabD fully operational, described below.

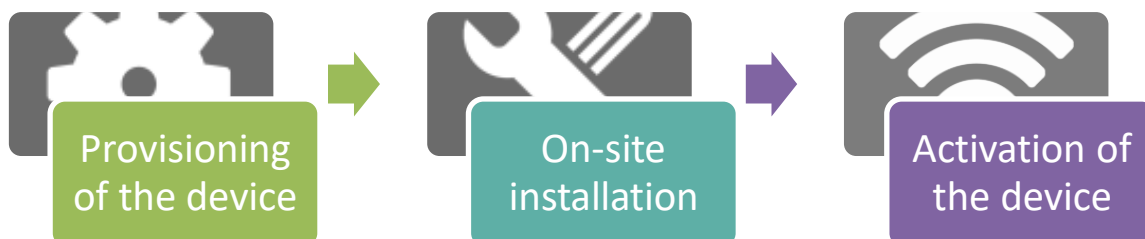

Provisioning of the device

You have to be sure that your **Senlab device has been well commissioned** to be able to reach your LoRaWAN network.

- ✓ Contact if needed your distributor to get your Senlab configuration
- ✓ Required information for provisioning the device into your LoRa system are listed in the following table:



Warning, don't unprovision device from your system before stopping it!
(refer application features to stop the application via RF)

| | devEUI | appEUI | appKey | appSKey | NwkSKey | netId | devAddress |
|--|--------|-----------|----------|-----------|-----------|-----------|------------|
| Case 1 : OTAA / PUBLIC Typical configuration for Network Operator based architecture | X | required | required | | | | |
| Case 2 : ABP / PUBLIC Typical configuration for Private mono gateway network | X | | | required | required | | required |
| Case 3 : ABP / PUBLIC Sensing-Labs SLgateway V2 configuration (local network) | X | Optional* | | Optional* | Optional* | Optional* | Optional* |

(*) If asked when ordering, devices are already provisioned into your SLgateway. If not, you need these parameters.


- Network & Application configuration of Senlab device can be done:
 - At factory (for minimal batch of 1000 devices)
 - By your distributor (more often)
 - By yourself (if you have your own SLsetting tool)
- Please refer to parameter list described into the Application features chapter to fit to your use case and get a "Plug&Play" device.
- **All application configuration can also be dynamically adjusted Over The Air** (via downlink request)

On-site installation

DEVICE POSITIONING

You have first to find the best position to your Senlab:

- ✓ Prefer vertical position (**antenna part upwards** as on following pictures)
- ✓ Avoid positioning the external cable pulled vertically under the device (prefer coiled positioning or use the rear gutters for outdoor version)
- ✓ Avoid direct sun light exposure or heater system proximity

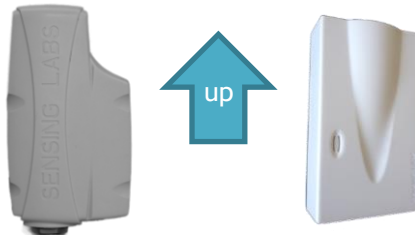

For best radio performance:

- Positioned the upper part of the device upwardly in a free space area
- avoid positioning the Senlab against a metallic element


DEVICE MOUNTING

| Device type | Device mounting |
|-------------------------|---|
| All versions | Stick the product to the wall or cabinet with a double-sided adhesive tape |
| Indoor versions | Screw the rear side of the product to the wall with countersunk screws make sure the screw heads don't exceed from the plastic side once installed |
| Outdoor versions | Use plastic cable ties with screw mount |

Refer to « Application Note Senlab installation » ([download link](#)) for full recommendation.

WIRING DIAGRAM


➤ The Senlab must be plugged to Digital sensor as follow

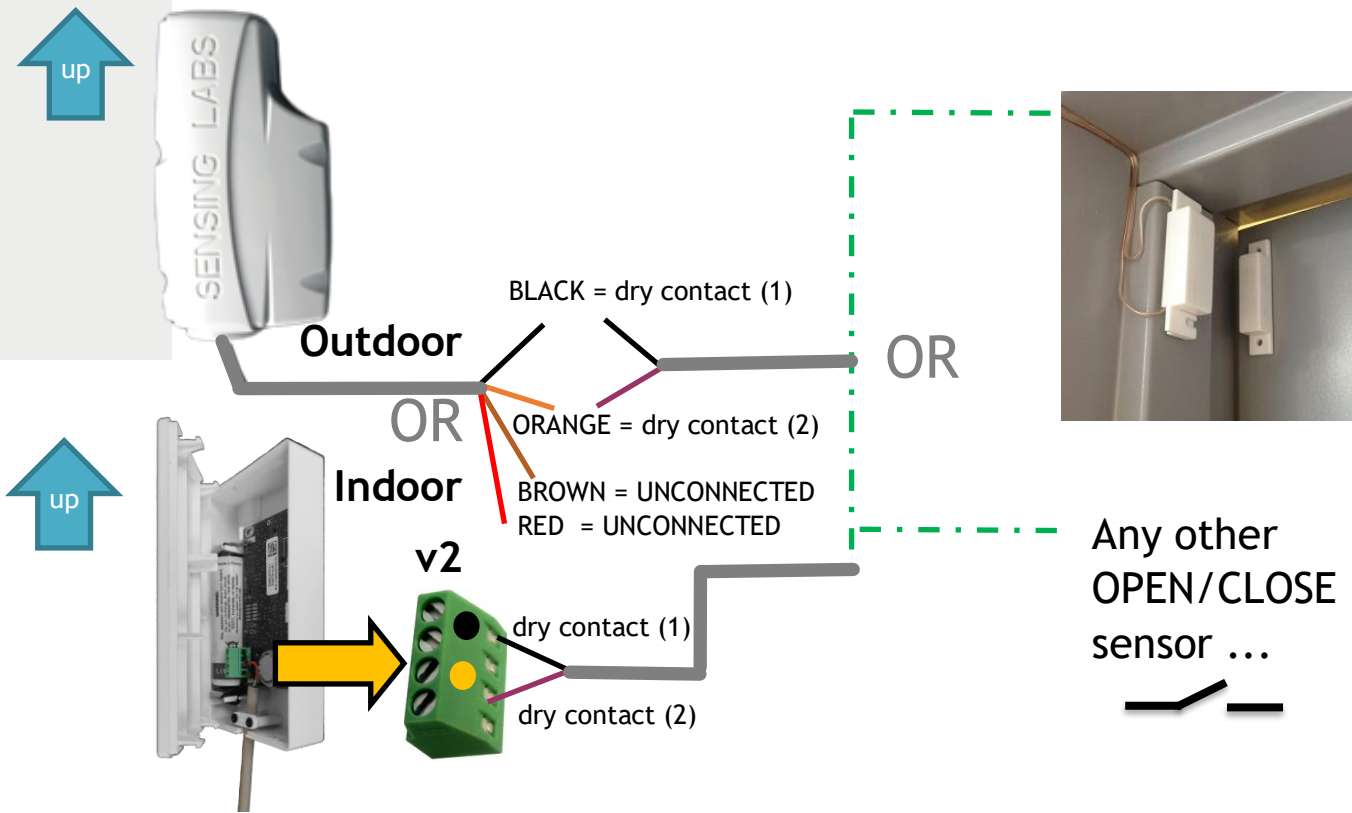

Now the device is well physically installed and plugged, you can start the activation process.

Activation of the device

To activate the Senlab device, you have to use a magnet (min pulling force 1Kg).

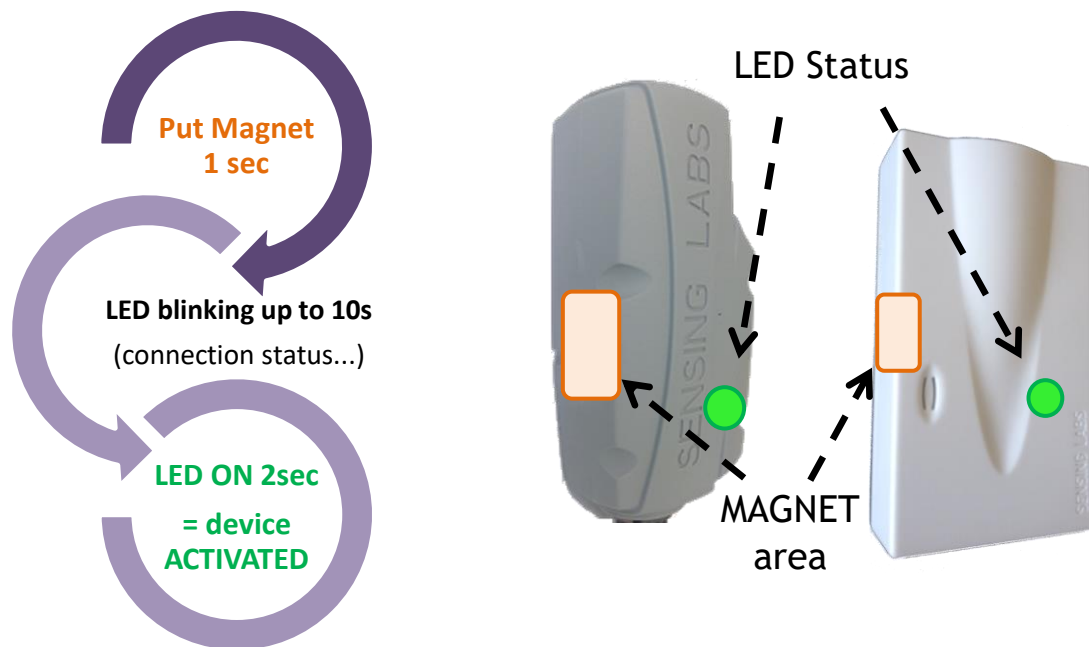

- ✓ Remove the magnet as soon as the LED flashes!
- ✓ If activation fails (No solid LED ON 2sec), Senlab will come back in storage mode.
- ✓ After successful activation, device will automatically send its START message



Once activated, if you pass the magnet one more time, the device will indicate its activation status after 3s LED blinking:

--> Solid LED ON 2sec will confirm that device is activated

Deactivation of the device

If you decide to deactivate Senlab, no more transmissions will be sent → That means that you need a physical access to the Senlab to activate it again.

Many ways are possible:

- **Over the Air:** by sending the downlink request “STOP application” (via your LoRaWAN system)
- **With physical access (with SLsetting tool):** by using SLsetting “disconnect” action
- **With physical access (only for test devices):** By holding the magnet during 20 seconds until the LED stay ON for 5 seconds.

Application features

This chapter describes the SenlabD application features available (accessible via SLgateway or SLcodecs)

SenlabD logs event (new **state** detection) depending of its configuration:

- ✓ state is "1" when contact gets open more than X seconds (1 sec by default)
- ✓ state is "0" when contact gets close more than X seconds (0 sec by default)

Logged event can be transmitted according to following conditions:

- ✓ Immediately: as soon as the state change
- OR**
- ✓ After X events and no later than X seconds after the oldest stored event

In all cases, at least one transmission will be notified if no transmission has happened during X minutes (1 hour by default).

The **current state** (state of the event at radio transmission time) is also included into the datalog message.

Measure data

| <u>ID</u> | <u>Description</u> | <u>Type</u> | <u>Unit</u> | <u>Range</u> |
|------------------------------|--|-------------|-------------|--------------|
| <i>current_state</i> | Is the circuit between 2 wires is open? When last radio message is transmitting | UINT8 | NA | 0...1 |
| <i>state</i> | Log of the 2 wires contact state | UINT8 | NA | 0...1 |
| <i>battery_current_level</i> | Battery level of the device | UINT8 | % | 1...100 |

Event data

| <u>ID</u> | <u>Description</u> | <u>Type</u> | <u>Unit</u> | <u>Range</u> |
|--------------------|---|-------------|-------------|--------------|
| <i>start_event</i> | Happens when device is restarted on the field | BOOL | - | - |

Configuration requests

| <u>Parameter ID</u> | <u>Description</u> | <u>Type</u> | <u>Unit</u> | <u>Range</u> |
|---|---|-------------|-------------|--------------|
| Digital configuration (Since V1.3) (ID = request_write_digital_cfg) | | | | |
| <i>is_open_enable</i> | True if open state must be detected (event) | BOOL | NA | - |
| <i>open_debounce</i> | Open state duration for validation rising event | UINT8 | Second | 0...255 |
| <i>is_close_enable</i> | True if close state must be detected (event) | BOOL | NA | - |
| <i>close_debounce</i> | Close state duration for validation falling event | UINT8 | Second | 0...255 |
| <i>max_events_nb</i> | Max number of event detection before notification | UINT8 | NA | 1...12 |
| <i>max_latency</i> | Max latency after oldest stored event before notification | UINT16 | Second | 0...65535 |
| <i>keep_alive</i> | Longest period without message | UINT8 | x10min | 1...72 (12h) |
| Reset battery level (ID = request_reset_battery_level) <i>Must be used after battery replacement only</i> | | | | |
| NO PARAMETERS | | | | |
| Stop application (ID = request_stop_application) <i>Warning: activation with magnet will be mandatory to reactivate the device</i> | | | | |
| NO PARAMETERS | | | | |

Battery replacement (Indoor version only)

Replacement battery must be a Lithium 3,6V AA type with 50mA min of supported continuous current → Contact your distributor to get original battery reference.

Indoor V1 will lose the activation status during the battery replacement, so the process is:

1. Open the casing
2. Remove the old battery
3. Put the new battery
4. Close the casing
5. Activate the device (see “Activation of the device” chapter)
6. Send the configuration request “request_reset_battery_level” to the device, using your application

Indoor V2 have the capability to keep activation status during a few minutes, so the process is:

1. Open the casing
2. Remove the old battery and, **during the same minute**, put the new battery
3. Check if the device activation is still OK (see “Activation of the device” chapter)
4. In case activation lost, you need to activate the device again
5. Close the casing
7. Send the configuration request “request_reset_battery_level” to the device, using your application

ATTENTION:

EN: There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to instructions.

FR: Il y a risque d'explosion si la batterie est remplacée par une batterie de type incorrect. Mettre au rebut les batteries usagées conformément aux instructions.

Technical characteristics

ISM Radio bands usage

Senlab globally communicates over frequencies in the 865-870MHz radio band with a maximum transmission power of 25mW e.r.p (+14dBm e.r.p).

More precisely, the following table describes the different sub-bands, as defined per Annex 1 of ERC Recommendation 70-03 (13 October 2017), which can be used by Senlab:

| Frequency Band | | Power | Spectrum Access |
|----------------|--------------|------------|-----------------|
| h1.3 | 865-868MHz | 25mW e.r.p | 1% duty-cycle |
| h1.4 | 868-868.6MHz | 25mW e.r.p | 1% duty-cycle |

Note that 1% duty-cycle for sub-band h1.3 is allowed by ERC/REC 70-03 Annex 1 Note 5 as its usage is limited to 865-868MHz.

Electrical safety

All circuits are SELV (Safety extra low voltage), including interface circuits which are only used for measurement (signals without power, these circuits are considered LPS).

Ambient temperature of use

The ambient temperature of use depends of the version:

| | |
|-----------------|---------------------|
| Indoor version | From 0°C to +55°C |
| Outdoor version | From -20°C to +70°C |

Legals

SENSING LABS SAS reserves the right to make corrections, modifications, enhancements, improvements and other changes to its products and services at any time and to discontinue any product or service without notice.

SENSING LABS products is not authorized for use in safety-critical applications (such as life support) where a failure of the product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use.

Buyers confirm that they have all necessary expertise in the safety and regulatory ramifications of their applications, acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of the product in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by SENSING LABS SAS.

© 2018 SENSING LABS SAS. All rights reserved. Sensing Labs logo, are registered trademarks of SENSING LABS SAS. All other brands and product names mentioned in this document are the property of their respective holders.

This is a non-contractual document and specifications are subject to change at any time without notice.

For more information about this software:

website - <http://www.sensing-labs.com>

support - <http://support.sensing-labs.com/projects/senlab>

Headquarters:

SENSING LABS SAS.

CAP OMEGA,

rond point Benjamin Franklin

34960 Montpellier cedex 02 – France